



MULTI-OUTLET EXTENSION CORD

Thank you for choosing this fine product from GRIOT'S GARAGE. Your MULTI-OUTLET EXTENSION CORD is simple to operate and suitable for use in the garage, work site or holiday and landscape lighting. Enjoy the best.

USEFUL INFORMATION

Insert male plug into a grounded 3-prong electrical outlet. Check to make sure the power positive lights are illuminated. Also make sure the weather guards are in place when the outlets are not in use. Unplug cord when not in use. Our optional WALL MOUNTING BRACKETS, item number 81230 work great to keep the cord aligned and gives the bench a clean look. These can be ordered separately in sets of ten.

WARNINGS AND CAUTIONS

Do not alter this product in any way. Do not use the MULTI-OUTLET EXTENSION CORD in wet conditions. Never use frayed or damaged cords. Turn application or tool "off" before installing plug. Fully insert plug. Keep children and pets away. Always store indoors. Fully extend the MULTI-OUTLET EXTENSION CORD before using to prevent overheating. Failure to comply with safety information could result in serious or fatal injury.

DISCLAIMER

GRIOT'S GARAGE is not responsible for any misuse of the MULTI-OUTLET EXTENSION CORD for any injury or damage incurred to any person or object related to the MULTI-OUTLET EXTENSION CORD.

ANSWERS TO YOUR QUESTIONS

Should you want to order another MULTI-OUTLET EXTENSION CORD, or for a complete selection of quality GRIOT'S GARAGE products please write, use the internet or call us toll-free. Reorder item number for the THREE OUTLET EXTENSION CORD is 45624; the SIX OUTLET EXTENSION CORD is 48320.

Have fun in your garage!

GRIOT'S GARAGE, INC.
3333 SOUTH 38TH STREET
TACOMA, WA 98409
800-345-5789
www.griotsgarage.com

© GRIOT'S GARAGE, INC.