



## 2-TON LOW PROFILE FLOOR JACK

Thank you for selecting this quality GRIOT'S product. The **2-TON LOW PROFILE FLOOR JACK** is designed to lift cars, trucks and SUV's. Please read and understand all instructions and cautions before using the **2-TON LOW PROFILE FLOOR JACK**. Enjoy the best!

### ASSEMBLY INSTRUCTIONS

After removing the wood shipping block from the **2-TON LOW PROFILE FLOOR JACK** the handle to the jack needs to be assembled and installed into the jack. Install the pole into the base of the floor jack while aligning the bolt hole as it drops into the base. Once it is aligned, install the allen bolt in through the hole and secure with the locking nut. (**PICTURE A**) The handle attaches to the pole with the two bolts and locking nuts. (**PICTURE B**)



PICTURE A

### USEFUL INSTRUCTIONS

Before using the **2-TON LOW PROFILE FLOOR JACK**, it is necessary to purge air from the valve system. This is carried out by lifting and turning the handle clockwise, and while being held in this position, pumping the **2-TON LOW PROFILE FLOOR JACK** several times. Release the handle and it will automatically return back to the initial position. The jack is now ready to be used. To lower the vehicle, lift and turn the handle slowly in the clockwise direction. After use, make sure the lifting beam is fully retracted.



PICTURE B

### IMPORTANT SAFETY INSTRUCTIONS

The vehicle to be lifted should never exceed the 2-ton rated capacity of the jack. Park the vehicle to be lifted on a flat firm surface and place wheel chocks behind the wheels to keep the vehicle from moving. Position the **2-TON LOW PROFILE FLOOR JACK** on a solid, even & horizontal surface; never use the **2-TON LOW PROFILE FLOOR JACK** on a slope. Every vehicle lifted by the **2-TON LOW PROFILE FLOOR JACK** should always have a secondary safety support, such as jack stands. Before using the **2-TON LOW PROFILE FLOOR JACK**, make sure that the vehicle is free of passengers, hand-brake engaged and the engine is off. Check your vehicle owner's manual for safe jacking points. In the absence of jacking points the **2-TON LOW PROFILE FLOOR JACK** should be positioned under the center of the load. Failure to position it correctly may cause the load to be unbalanced, resulting in possible equipment/load damage and operator injury. The **2-TON LOW PROFILE FLOOR JACK** is a lifting device only and should never be used to move the vehicle or load. As an additional safety feature the **2-TON LOW PROFILE FLOOR JACK** is equipped with a valve to prevent the unit from being overloaded.

### DISCLAIMER

GRIOT'S GARAGE is not responsible for any misuse of the **2-TON LOW PROFILE FLOOR JACK** for any injury or damage incurred to any person or object related to the **2-TON LOW PROFILE FLOOR JACK**.

### ANSWERS TO YOUR QUESTIONS

Should you have any questions about the assembly or use of the **2-TON LOW PROFILE FLOOR JACK**, please call our Customer Service Department at 800-345-5789 or email to [info@griotsgarage.com](mailto:info@griotsgarage.com). For a complete selection of quality products or to receive a free Griot's Garage handbook, call us or visit online at [www.griotsgarage.com](http://www.griotsgarage.com). Reorder item number 77739.

*Have fun in your garage!®*

GRIOT'S GARAGE, INC.  
3333 SOUTH 38<sup>TH</sup> STREET  
TACOMA, WA 98409

**800-345-5789**

**[www.griotsgarage.com](http://www.griotsgarage.com)**

© GRIOT'S GARAGE, INC.