



RANDOM ORBITAL BACKING PLATE REPLACEMENT

Thank you for choosing this fine product from GRIOT'S GARAGE. Enjoy the best.

USEFUL INFORMATION

The GRIOT'S GARAGE **RANDOM ORBITAL** uses a hook and loop surface on the backing plate to attach our foam polish and wax pads. The backing plate is connected to the machine with four Phillips® head screws. To replace the backing plate start by removing these four screws being careful not to misplace the lock washers and flat washers. Once the screws are removed, simply lift the backing plate away from the counter weight flange. To install a replacement backing plate, insert one of the Phillips® head screws into a mounting hole of the backing plate with the lock washer placed against the head of the screw and the flat washer placed next to the backing plate. Align the threads of the screw with one of the mounting holes in the counter weight flange. Once the screw is installed keep it loose with 3-4 threads engaged. Once all four screws have been installed into the counter weight flange, tighten until snug (20-25 ⁱⁿ/_{lbs}).

DISCLAIMER

GRIOT'S GARAGE is not responsible for any misuse of the **RANDOM ORBITAL BACKING PLATE** for any injury or damage incurred to any person or object related to the **RANDOM ORBITAL BACKING PLATE**.

ANSWERS TO YOUR QUESTIONS

Should you want to order another **RANDOM ORBITAL BACKING PLATE** or for a complete selection of quality GRIOT'S GARAGE products, please write or call us toll-free at 800-345-5789. You can use the internet at www.griotsgarage.com. Reorder item number 10925A.

Have fun in your garage!

GRIOT'S GARAGE, INC.
3333 SOUTH 38TH STREET
TACOMA, WA 98409
800-345-5789
www.griotsgarage.com

© GRIOT'S GARAGE, INC.