



WALL-MOUNTED CORD WINDER

Thank you for choosing this fine product from GRIOT'S GARAGE. The WALL-MOUNTED CORD WINDER is a simple, foolproof way to keep extension cords free of twists and knots. WALL-MOUNTED CORD WINDER is a convenient way to neatly store up to 150 feet of 5/8" diameter electrical cord.

USEFUL INFORMATION

Determine whether you prefer to wind with your left or your right hand. Insert the hand crank through the body and drive wheel. Slide the hand crank connector over the square drive at the end of the hand crank. Fasten the crank connector with the #8 hex head screw and washer. Do not over-tighten this screw! This may not allow the drive wheel to turn properly. If this occurs, loosen the screw 1/2 turn at a time until drive wheel turns freely. The wall bracket must be mounted to a solid surface before attempting to connect the winder and net. Mount the wall bracket with arrow up (arrow can be seen inside of the wall bracket) to a wall at a convenient height for crank operation, and with enough clearance for the nylon bag to swing freely. Line up the locking ears of the WALL-MOUNTED CORD WINDER with the slots in the wall bracket. Insert the WALL-MOUNTED CORD WINDER, push in and rotate 1/4 turn so the bag hangs down.

Stretch out the cord and remove the kinks before loading. In cold weather the cord may be stiff, let the cord lay in the sunlight or in a heated area to soften slightly before loading.

Insert the male end of the cord through the WALL-MOUNTED CORD WINDER from top to bottom. Pull enough cord through the bottom of the bag to allow the bag to swing freely when cord is plugged into an electrical outlet. Install the cord anchor at the bottom of the net. This will help secure the male end of the cord.

OPERATION

To wind up your cord push back on the yoke, applying just enough pressure to lightly squeeze the cord between the yoke roller and drive wheel. Keep pressure on the yoke and turn the crank. To use the cord, simply pull out the amount of cord you need.

CAUTION

Cords may get hot with use if not fully extended. When cord is wound in the net, DO NOT operate with tools or appliances that draw more than 50% of the cord's rated capacity (amps). DO NOT use old cords that are weather-cracked, frayed, cut or damaged in any way. ALWAYS follow cord manufacturer's recommended load rating and any usage recommendations on cord or cord package. DO NOT wind cord into the WALL-MOUNTED CORD WINDER under sub-zero conditions unless your cord has been designed for use under these conditions. Some cords will crack in sub-zero weather when coiled..

DISCLAIMER

GRIOT'S GARAGE is not responsible for any misuse of the WALL-MOUNTED CORD WINDER for any injury or damage incurred to any person or object related to the WALL-MOUNTED CORD WINDER.

ANSWERS TO YOUR QUESTIONS

Should you want to order another WALL-MOUNTED CORD WINDER, or for a complete selection of quality GRIOT'S GARAGE products please write, use the internet or call us toll-free. Reorder item number 45502.

Have fun in your garage!™

GRIOT'S GARAGE
3500-A 20th Street E.
Tacoma, WA 98424
800-345-5789
www.griotsgarage.com

