



LOW PROFILE FLOOR JACK

Thank you for choosing this fine product from GRIOT'S GARAGE. **LOW PROFILE FLOOR JACK** is designed to lift cars, trucks and SUV's. The low profile design allows easy access to jacking points and cross members. The optional **EXTENSION PADS** (item # 77780) allow for higher lifting range when used with trucks or SUV's. Enjoy the best.

USEFUL INSTRUCTIONS

Insert the handle into the lifting socket and secure using the supplied Allen bolt. Before using the **LOW PROFILE FLOOR JACK**, it is necessary to purge air from the valve system. This is carried out by lifting and turning the handle clockwise, and while being held in this position, pumping the **LOW PROFILE FLOOR JACK** several times. Release the handle and it will automatically return back to the initial position. The jack is now ready to be used. The **LOW PROFILE FLOOR JACK** is fitted with a foot pedal that gives a faster lifting approach to the vehicle. To lower the vehicle, lift and turn the handle slowly in the clockwise direction. The **LOW PROFILE FLOOR JACK** is fitted with a safety device that only permits the vehicle to be lowered smoothly by automatically controlling the speed at a rate dependant upon the size of the load. After use, make sure the lifting beam is fully retracted.

SAFETY

The vehicle to be lifted should never exceed the 2-ton rated capacity of the jack. Never operate the jack beyond its maximum stroke. Park the vehicle to be lifted on a flat firm surface and place wedges under the wheels to keep the vehicle from moving. Position the **LOW PROFILE FLOOR JACK** on a solid, even & horizontal surface; never use the **LOW PROFILE FLOOR JACK** on a slope. The **LOW PROFILE FLOOR JACK** should be positioned so as to avoid the user from having to operate it under the vehicle. Every vehicle lifted by the **LOW PROFILE FLOOR JACK** should always have a secondary safety support, such as jack stands. Before using the **LOW PROFILE FLOOR JACK**, make sure that the vehicle is free of passengers, handbrake engaged and the engine is off. Consult your vehicle handbook for jacking points. In the absence of jacking points the **LOW PROFILE FLOOR JACK** should be positioned under the center of the load. Failure to position it correctly may cause the load to be unbalanced, resulting in possible equipment/load damage and operator injury. It is imperative that all possible precautions are taken to avoid unexpected movement of the vehicle load when it is being lifted. The **LOW PROFILE FLOOR JACK** is a lifting device only and should never be used to move the vehicle or load. If these basic rules are not followed, injury to the user, the **LOW PROFILE FLOOR JACK** or the vehicle being lifted may result. As an additional safety feature the **LOW PROFILE FLOOR JACK** is equipped with a valve to prevent the unit from being overloaded. This unit is factory set and must not be tampered with.

DISCLAIMER

GRIOT'S GARAGE is not responsible for any misuse of the **LOW PROFILE FLOOR JACK** for any injury or damage incurred to any person or object related to the **LOW PROFILE FLOOR JACK**.

ANSWERS TO YOUR QUESTIONS

Should you want to order another **LOW PROFILE FLOOR JACK** or for a complete selection of quality GRIOT'S GARAGE products, please write or call us toll-free at 800-345-5789. Or visit our website: www.griotsgarage.com. Reorder item number 77739.

Have fun in your garage!®

GRIOT'S GARAGE, INC.
3500-A 20TH STREET E.
TACOMA, WA 98424

800-345-5789
www.griotsgarage.com

© GRIOT'S GARAGE, INC.