




# ALUMINUM FLOOR JACK

Thank you for choosing this fine product from GRIOT'S GARAGE.

## USEFUL INSTRUCTIONS

### **STEP 1 - HOW TO ASSEMBLE THE HANDLE STOP BRACKET**

Assemble the handle stop bracket by loosening the top screw on the inside of the wheel on the chassis and slide the hole of the bracket over it (with the shorter side of the 'L' pointing up and in - you'll have to slide the shorter part of the 'L' under the handle assembly.)

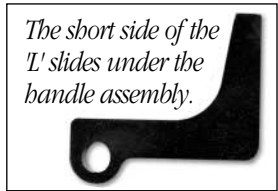


### **STEP 2 - HOW TO ASSEMBLE THE HANDLE**

Remove the set screw with the knurled edge from the front of the handle base. Push the handle into the base so that the inside post is inserted into the hole in the bottom of the handle. Tighten the set screw. If the handle pulls out of the base once you've tightened the set screw, remove the handle and reinsert it, making sure the post is completely fitted into the bottom hole of the handle and retighten.

## IMPORTANT OPERATION INSTRUCTIONS

During repetitive usage of this ALUMINUM FLOOR JACK, make sure all air pressure is released before lifting another vehicle. Do this by turning the pump handle counterclockwise to release the pressure. Raise and lower the handle three or four times with the pressure valve open before turning the handle clockwise to close the valve. You may now properly position the jack and pump the handle to raise the vehicle. To lower the vehicle, simply turn the handle counterclockwise to release the pressure. If you find it necessary to add hydraulic oil to the reservoir, remove the silver Phillips-head screw on the back of the chassis (below the Handle assembly) and add SAE 10 hydraulic oil or equivalent. Should you ever need to replace any seals on your jack, a full set of accessory O-rings are included

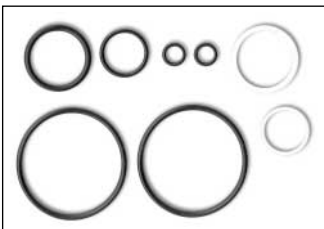

*Should you ever need to replace any seals on your jack, a full set of accessory o-rings are included.*

## WARNINGS AND CAUTIONS

Use the Jack for lifting the rated capacity only. **DO NOT OVERLOAD.** ALWAYS use appropriately rated jack stands to support the weight of the vehicle when doing any work. Center the load on the jack saddle. Off-center loads can damage the seals in the hydraulic pump, causing jack failure. Lift only dead weight - always get passengers out of the vehicle before lifting.

## DISCLAIMER

GRIOT'S GARAGE is not responsible for the misuse of the ALUMINUM FLOOR JACK or for any injury or damage incurred to any person or object related to the ALUMINUM FLOOR JACK.

## ANSWERS TO YOUR QUESTIONS

Should you want to order another ALUMINUM FLOOR JACK, or for a complete selection of quality GRIOT'S GARAGE products, please write, use the internet or call us toll-free at **800-345-5789**.  
Reorder item number 77744.

*Have fun in your garage!™*

## SPECIFICATIONS

Capacity . . . . . 2204lbs  
Min. Saddle Height . . 3.4"  
Max Saddle Height . . 17.5"  
Hydraulic Lift . . . . . 13.8"  
Length . . . . . 23.6"  
Width . . . . . 11.4"  
Height . . . . . 6.1"  
Weight . . . . . 37.5 lbs

GRIOT'S GARAGE, INC.  
3500-A 20th Street E.  
Tacoma, WA 98424  
**800-345-5789**  
**www.griotsgarage.com**

© 2001 GRIOT'S GARAGE, INC.