




PROFESSIONAL TIRE INFLATING GUN

Thank you for choosing this fine product from GRIOT'S GARAGE. Please read these directions completely before using.

OPERATION INSTRUCTIONS

Connect the air supply hose (4) to the gun. **Maximum supply pressure is 130 psi.** To carry out the inflation and pressure checking operation, place the end piece (1) onto the valve of the wheel and press the lever (2) which is located on the end piece. Take hold of the tool and read the pressure. To inflate, press the lever (3) down completely until air is emitted, then release the lever and read the pressure. Repeat this operation until the pressure required is shown on the dial of the pressure gauge. To deflate, press the lever (3) until the first click is heard (intermediary position). Maximum pressure detected by the pressure gauge is 140 psi.

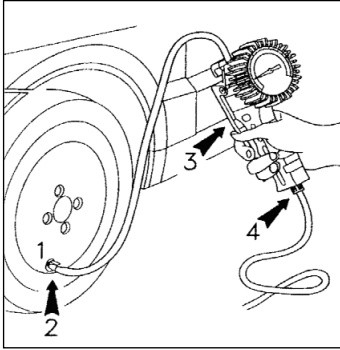

WARNINGS

The pressure gauge should not receive knocks or bangs; if it does the calibration should be checked. **Keep the PROFESSIONAL TIRE INFLATING GUN in a safe place, out of the reach of children.** Avoid connecting the supply hose (4) with a pressure above 130 psi. Avoid connecting the end piece (2) to sources which have a pressure higher than the pressure indicated on the dial of the pressure gauge. This gun should only be used with air. Do not use the gun in ways other than those described in the operation instructions.

DISCLAIMER

GRIOT'S GARAGE is not responsible for the misuse of the PROFESSIONAL TIRE INFLATING GUN or for any injury or damage incurred to any person or object related to the PROFESSIONAL TIRE INFLATING GUN.

ANSWERS TO YOUR QUESTIONS

Should you want to order another PROFESSIONAL TIRE INFLATING GUN, or for a complete selection of quality GRIOT'S GARAGE products, please write, use the internet or call us toll-free at **800-345-5789**. Reorder item number is 92549

Have fun in your garage!™

GRIOT'S GARAGE, INC.
3500-A 20th Street E.
Tacoma, WA 98424
800-345-5789
www.griotsgarage.com