



ROLLING HYDRAULIC CAR LIFTS

Thank you for selecting this quality GRIOT'S product. The **ROLLING HYDRAULIC CAR LIFTS** allow you to lift and reposition your vehicles easily and quickly, freeing up precious space. Please read and understand all instructions and cautions below before using the **ROLLING HYDRAULIC CAR LIFTS**. Enjoy the best!



PICTURE A



PICTURE B



PICTURE C



PICTURE D



PICTURE E

USEFUL INFORMATION

Before using the **ROLLING HYDRAULIC CAR LIFTS** to raise your vehicle it may be necessary to bleed the air from the hydraulic cylinder. Open the bleeder valve by rotating the bleeder knob (**PICTURE A**) in the counter clockwise direction. It may be necessary to remove the safety lock pin (**PICTURE B**). Next you need to extend the hydraulic ram by separating the two rollers apart (**PICTURE C**). Once the hydraulic ram is fully extended close the bleeder valve by rotating the bleeder knob in the clockwise direction. Press down on the pump lever and release the safety hook (**PICTURE D**). Start pumping the lever in an up and down motion until the two rollers move far enough to expose the lock pin hole in the frame unit (**PICTURE B**).

OPERATION

Once the air has been bled from the hydraulic system you may start lifting your vehicle. Place the **ROLLING HYDRAULIC CAR LIFTS** on the floor and press down on the pump lever to release the safety hook. Remove the safety lock pin from the frame. Before operating open the bleeder valve by rotating the bleeder knob in the counter clockwise direction. Expand the **ROLLING HYDRAULIC CAR LIFTS** by spreading the two rollers far enough to fit under the tire. Place the **ROLLING HYDRAULIC CAR LIFTS** so the unit is parallel to the sidewall of the tire with approximately $\frac{3}{4}$ " clearance between the frame and the tire. If the unit is misaligned it is possible that the tire will be forced to hit the axle and not the rollers, causing damage to the tire. To lift the tire close the bleeder valve by rotating the bleeder knob in the clockwise direction. Start pumping the lever in an up and down motion until the two rollers move far enough to lift the tire and expose the safety lock pin hole in the frame unit. Place the safety lock pin into the hole in the frame unit and secure the pump with the safety hook. Before lowering the **ROLLING HYDRAULIC CAR LIFTS**, make sure nothing is under the vehicle. (i.e. - drain pans, tools, etc.) Remove the safety lock pin from the frame and open the bleeder valve by rotating the bleeder knob in the counter clockwise direction. The **ROLLING HYDRAULIC CAR LIFTS** can be removed once the tire is on the ground.

PROPER STORAGE

To store your **ROLLING HYDRAULIC CAR LIFTS** you may use the **ROLLING 4-UNIT CAR LIFT STORAGE RACK** (**PICTURE E**) part number 77752.

WARNINGS AND CAUTIONS

- Do not operate the **ROLLING HYDRAULIC CAR LIFTS** on an incline or a slope. The **ROLLING HYDRAULIC CAR LIFTS** must only be used on a smooth level surface.
- Do not over load the **ROLLING HYDRAULIC CAR LIFTS** beyond the recommended capacity of 1,500 lbs per unit.
- Do not start the vehicle's engine or attempt to drive the vehicle when it is positioned on the **ROLLING HYDRAULIC CAR LIFTS**. These are intended for hand maneuvering of vehicles only.
- Do not use the **ROLLING HYDRAULIC CAR LIFTS** on tires wider than 13 inches.
- Do not attempt to push the casters of the **ROLLING HYDRAULIC CAR LIFTS** over obstacles.
- After lifting your vehicle with the **ROLLING HYDRAULIC CAR LIFTS** always remember to secure the safety lock pin. Always remove the safety lock pin before lowering the vehicle from the **ROLLING HYDRAULIC CAR LIFTS**.
- To avoid flat spots on your tires do not store vehicles on the **ROLLING HYDRAULIC CAR LIFTS** for long time periods.

DISCLAIMER

GRIOT'S GARAGE is not responsible for any misuse of the **ROLLING HYDRAULIC CAR LIFTS** for any injury or damage incurred to any person or object related to the **ROLLING HYDRAULIC CAR LIFTS**.

ANSWERS TO YOUR QUESTIONS

Should you have any questions about the **ROLLING HYDRAULIC CAR LIFTS**, please call our Customer Service Department at 800-345-5789 or email to info@griotsgarage.com. For a complete selection of quality products or to receive a free GRIOT'S GARAGE handbook, please call us or visit us online at www.griotsgarage.com. Reorder item number 77749.

Have fun in your garage!®

GRIOT'S GARAGE, INC.
3333 SOUTH 38TH STREET
TACOMA, WA 98409
800-345-5789
www.griotsgarage.com

© GRIOT'S GARAGE, INC.