



WALL MOUNTED CORD WINDER

FIGURE #1 - Installation of Crank
(Your Choice: Left or Right)



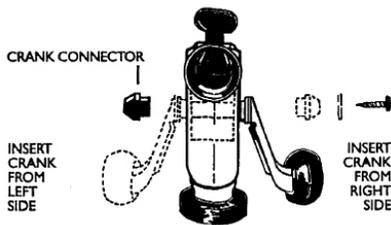


FIGURE #2

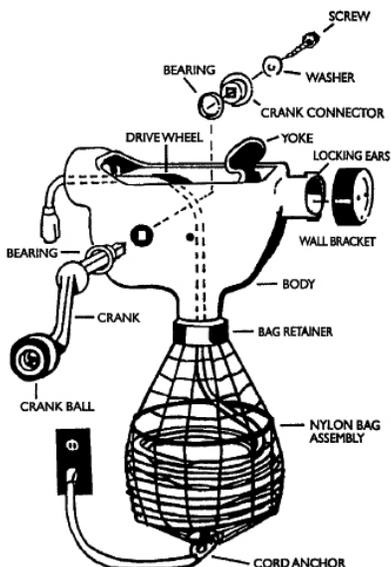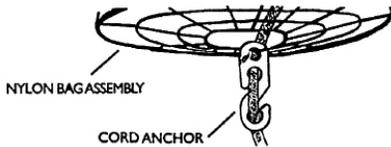

Thank you for selecting this quality GRIOT's product. Please use these easy-to-follow instructions to achieve the best results. The **WALL MOUNTED CORD WINDER** is a simple, foolproof way to keep extension cords free of twists and knots. It uses a unique reel design that allows you to wind and store up to 150 feet of 5/8" diameter electrical cord.

ASSEMBLY AND INSTALLATION INSTRUCTIONS

- STEP 1:** Determine whether you prefer to wind with your left or your right hand. Insert the hand crank through the body and drive wheel.
- STEP 2:** Slide the hand crank connector over the square drive at the end of the hand crank.
- STEP 3:** Fasten the crank connector with the #8 hex head screw and washer.
- STEP 4:** Mount the wall bracket with arrow up (arrow can be seen inside of the wall bracket) to a wall at a convenient height for crank operation, and with enough clearance for the nylon bag to swing freely.
- STEP 5:** Line up the locking ears of the **WALL MOUNTED CORD WINDER** with the slots in the wall bracket. Insert the **WALL MOUNTED CORD WINDER**, push in and rotate 1/4 turn so the bag hangs down.
- STEP 6:** Stretch out the cord and remove the kinks before loading.
- STEP 7:** Insert the male end of the cord through the **WALL MOUNTED CORD WINDER** from top to bottom. Pull enough cord through the bottom of the bag to allow the bag to swing freely when cord is plugged into an electrical outlet. Install the cord anchor at the bottom of the net. This will help secure the male end of the cord.

To wind up your extension cord, push back on the yoke, applying just enough pressure to lightly squeeze the cord between the yoke roller and drive wheel. Keep pressure on the yoke and turn the crank. To use the cord, simply pull out the amount of cord you need.

PRECAUTIONS AND DISCLAIMER

Cords may get hot with use if not fully extended. When cord is wound in the net, do not operate tools or appliances that draw more than 50% of the cord's rated capacity. Always follow cord manufacturer's recommended load rating and any usage recommendations on cord or cord package. GRIOT'S GARAGE is not responsible for any misuse of the **WALL MOUNTED CORD WINDER** for any injury or damage incurred to any person or object related to the **WALL MOUNTED CORD WINDER**.

ANSWERS TO YOUR QUESTIONS

Should you have any questions about the application of the **WALL MOUNTED CORD WINDER**, our Customer Service Department can be reached by phone at 800-345-5789 or by email at info@griotsgarage.com. For a complete selection of quality products or to receive a free GRIOT'S GARAGE handbook, please call or visit us online at www.griotsgarage.com.

Have fun in your garage!®

GRIOT'S GARAGE, INC.
3333 SOUTH 38TH STREET
TACOMA, WA 98409
800-345-5789
www.griotsgarage.com

© GRIOT'S GARAGE, INC. - ITEM #45502