

Here's how easy it is to create flawless paint!



1 Wash

Remove loose contaminants using a traditional hose and bucket, foaming system, rinseless, or waterless method.



2 Clay

Prep the surface and produce a truly clean slate by removing stubborn, embedded contaminants from your paint.



3 Butter

Spread product onto pad face starting at center and work to outer edge. Spread evenly with domed cap.



4 Polish

Place the buffing pad onto paint, set machine speed to 2, then spread product in a small area. Turn speed up to 3-5 for polishing.




5 Wipe

After polishing wipe residue away with a premium microfiber towel, turning the towel often, then buff to a brilliant luster.

Have fun in your garage!®



See perfection in every reflection

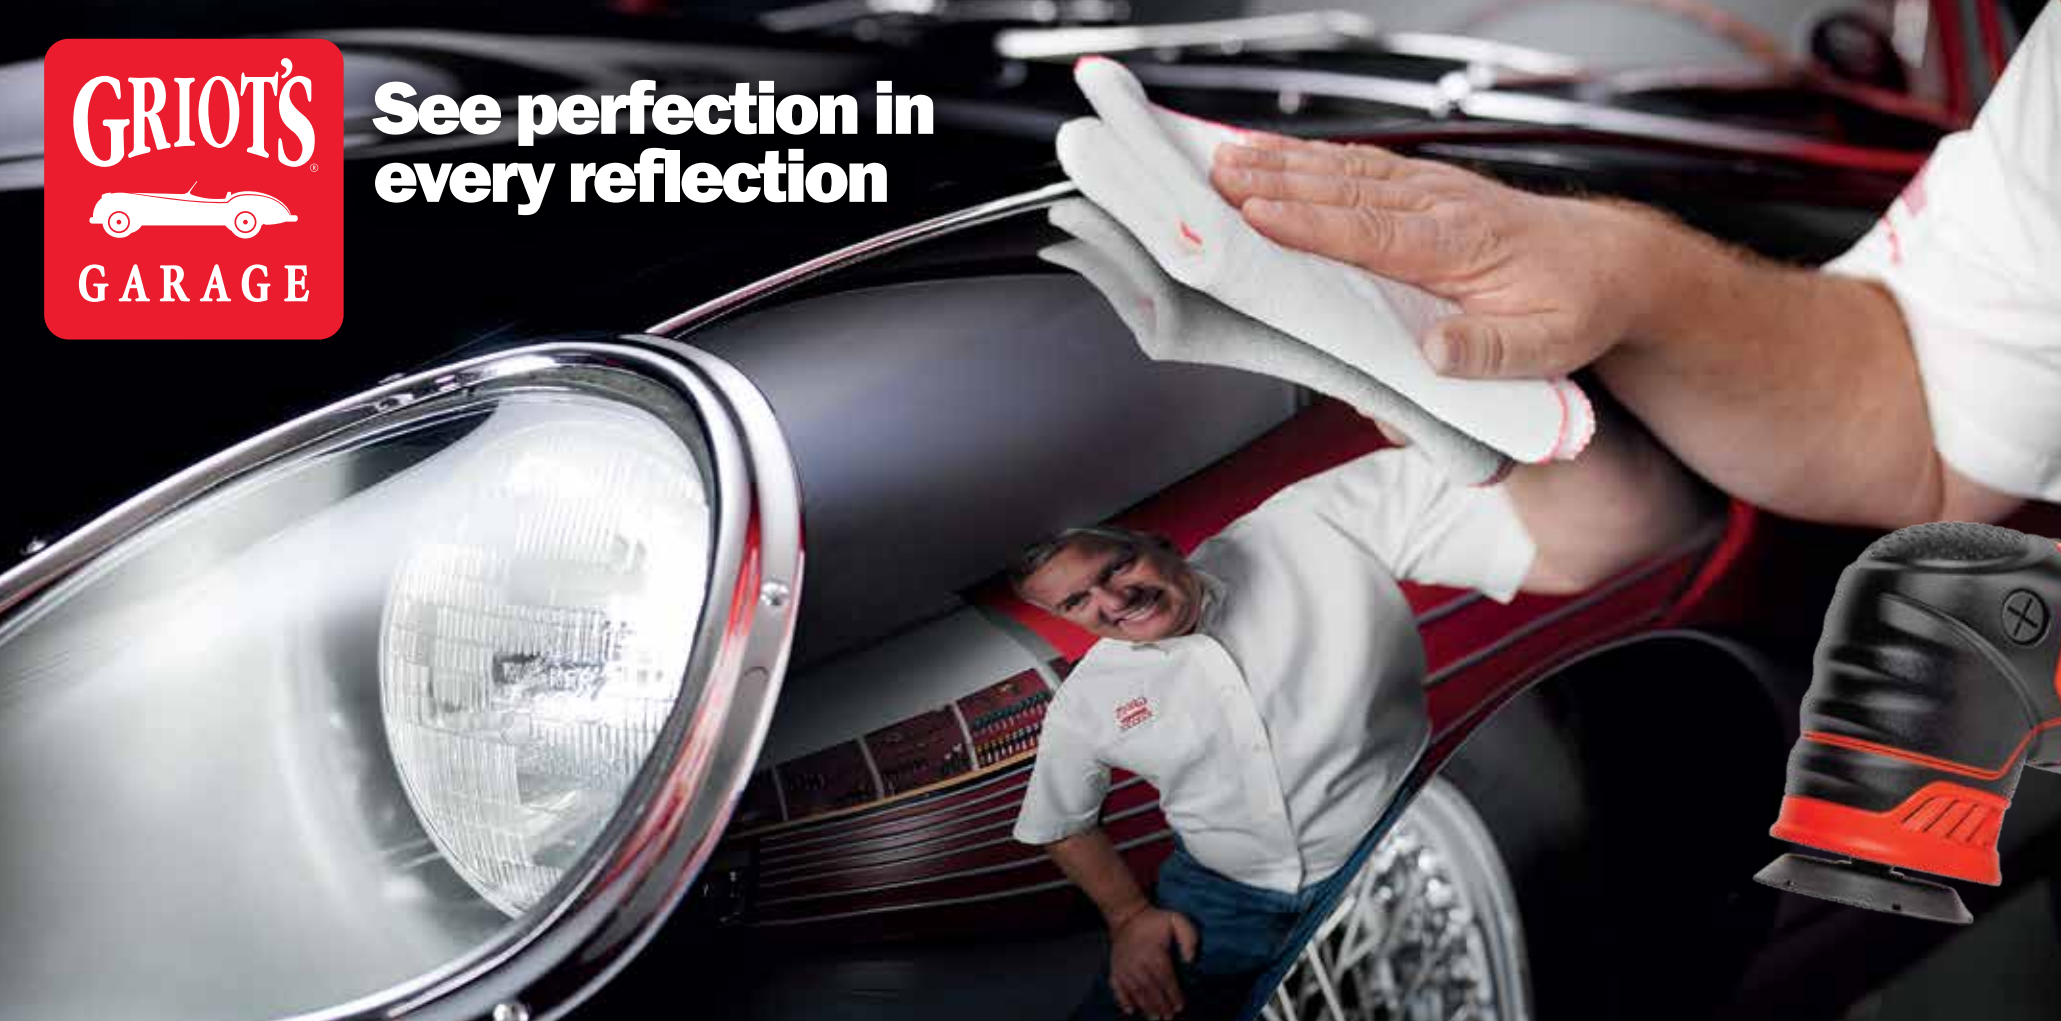

You've made a great choice putting this tool in your hand.

Let me tell you with complete assurance... you're about to have the most fun you've ever had in your garage. Removing swirl marks and other surface defects from paintwork always brings a smile to my face. The balance and comfort of this tool, mixed with the amazing results it creates will have you grinning from ear to ear in that mirror-like finish. Of course, we are here if you need us. Training videos are on YouTube, griotsgarage.com, or if you just need to talk to a pro, give us a call at 800-345-5789. Now stop reading and go have some fun!

Richard
Richard Griot
Car Care Perfectionist



100% GRIOT'S GARAGE GUARANTEED



ADVANCED PAINT CARE OPTIONS

Polishing Tips


- First do no harm. Always use the least invasive method first. Test method in a small area and adjust approach if necessary.
- Dedicate your pads to one product. Never apply wax on a pad you've used to polish.
- Butter entire pad face prior to application using domed cap. Reapply 3 or 4 opposing drops on each subsequent panel.
- Set appropriate machine speed per reference chart.
- Place power cord over your shoulder to avoid contact with the surface of your vehicle.
- Always start and stop machine with pad resting gently on the surface.
- Frequently clean pad by running it against a Foam Pad Conditioner Brush or towel.

Correcting and Perfecting
Work one section at a time, then remove any remaining residue immediately by hand using a Microfiber Plush Edgeless Towel.

Waxing and Sealing
Apply a thin, even layer to entire vehicle. Allow residue to dry to a haze or wait 20-30 minutes then wipe to a brilliant shine using a PFM® Dual-Weave Wax Removal Towel.

Buffing Pad Maintenance
Following work, rinse pads thoroughly with hot water, treat with Microfiber & Foam Pad Cleaner, allow to dwell, rinse thoroughly, and air dry.

Tip of the Trade
Amplify the correction speed of your BOSS™ Creams by pairing with our BOSS™ Microfiber Pads.

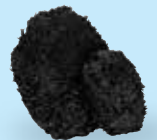

BOSS™ Microfiber Fast Cutting Pads
For rapid removal of moderate to severe defects.



BOSS™ Microfiber Pads
Improved conformability to body panels for rapid removal of moderate to severe defects.

NOTE: Always finish with foam for optimal clarity.

METHOD	PAINT CONDITION	USE THESE PRODUCTS	APPLICATION
Decontaminate Surface Remove loose and bonded contaminants prior to polishing. 1 - Wash and dry 2 - Assess the surface 3 - Clay if rough	Embedded Contaminants OVERSPRAY FALLOUT BRAKE DUST TREE SAP MIST WATER SPOTS ROAD DEBRIS Clear Coat Color Coat Primer	USE WITH Paint Cleaning Clay with Speed Shine as a lubricant OR USE WITH Brilliant Finish™ Synthetic Clay with Speed Shine as a lubricant	Paint Cleaning Clay or Brilliant Finish™ Synthetic Clay used with Speed Shine® Application: Following a wash, mist a liberal application of Speed Shine onto the paint to serve as a lubricant. Then gently glide your clay product across surface until smooth. Pro Tip: Break-in Synthetic Clay by treating glass first. Always work on a cool surface.
ASSESS SURFACE CONDITION: SELECT ONE OF THE FOLLOWING OPTIONS BASED ON: 1. PAINT CONDITION 2. TIME ALLOWED 3. DESIRED RESULTS			
1-STEP Pure Protection <input type="checkbox"/> Correct <input type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Wax Ready Paint WAX READY PAINT Clear Coat Color Coat Primer	Liquid Gloss Poly Wax with Red Foam Waxing Pad OR Best of Show™ Wax with Red Foam Waxing Pad	Liquid Gloss Poly Wax Speed Setting: 2-3 <i>For high gloss and maximum protection.</i> Best of Show® Wax Speed Setting: 2-3 <i>For maximum color, depth, and clarity.</i> Application: Using moderate arm speed, apply a thin, even coat to entire vehicle, then remove residue using a PFM® Dual Weave Wax Removal Towel.
1-STEP All-In-One <input checked="" type="checkbox"/> Correct <input checked="" type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Fine Swirls, Scratches, and Stains SWIRLS SCUFFS STAINS Clear Coat Color Coat Primer	IN ONE STEP BOSS™ Finishing Sealant with BOSS™ Correcting Foam Pad OR One-Step Sealant with Orange Foam Correcting Pad OR Liquid Wax 3-in-One with Orange Foam Correcting Pad	BOSS™ Finishing Sealant Speed Setting: 2-3 <i>For perfecting and protecting your paint finish</i> One-Step Sealant Speed Setting: 2-3 <i>Restores color, depth, and clarity delivering long-term protection</i> Liquid Wax 3-in-1 Speed Setting: 2-3 <i>Removes light swirls, adds rich gloss, and carnauba protection</i> Application: Using slow arm speed, work one section at a time, then remove immediately residue using a Microfiber Plush Edgeless Towel.
2-STEP Correct & Protect <input checked="" type="checkbox"/> Correct <input checked="" type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Light Swirls, Scratches, and Stains SWIRLS SCRATCHES WATER SPOTS Clear Coat Color Coat Primer	STEP 1 BOSS™ Correcting Cream with BOSS™ Correcting Foam Pad STEP 2 Liquid Gloss Poly Wax or Best of Show® Wax with Red Foam Waxing Pad	STEP 1: BOSS™ Correcting Cream Speed Setting: 3-4 <i>Eliminate moderate defects like light scratches and swirl marks, while adding depth and clarity</i> Application: Using slow arm speed, work one section at a time, then remove immediately residue using a Microfiber Plush Edgeless Towel. STEP 2: Select your preferred protection Speed Setting: 2-3 Liquid Gloss Poly Wax or Best of Show® Wax Application: Using moderate arm speed, apply a thin, even coat to entire vehicle, then remove residue when drying using a PFM® Dual Weave Wax Removal Towel.
3-STEP Best of Show® Method <input checked="" type="checkbox"/> Correct <input checked="" type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Moderate Swirls and Scratches SCRATCHES OXIDATION Clear Coat Color Coat Primer	STEP 1 BOSS™ Fast Correcting Cream with BOSS™ Fast Correcting Foam Pad STEP 2 BOSS™ Perfecting Cream with BOSS™ Perfecting Foam Pad STEP 3 Liquid Gloss Poly Wax or Best of Show® Wax with Red Foam Waxing Pad	STEP 1: BOSS™ Fast Correcting Cream Speed Setting: 4-5 Application: Using slow arm speed, work one section at a time, then remove residue using a Microfiber Plush Edgeless Towel. STEP 2: BOSS™ Perfecting Cream Speed 3-4 Application: Using slow arm speed, work one section at a time, then remove any remaining residue using a Microfiber Plush Edgeless Towel. STEP 3: Select your preferred protection Speed 2-3 Liquid Gloss Poly Wax or Best of Show® Wax Application: Using moderate arm speed, apply a thin, even coat to entire vehicle, then remove residue using a PFM® Dual Weave Wax Removal Towel.

