

GET THE MOST OUT OF YOUR POLISHER WITH OUR COMPLETE BOSS™ SYSTEM



BOSS | BEST OF SHOW SYSTEM®

Long-Throw Orbital Polishers | **G15/G21**

SURFACE PREPARATION

Foundation of perfection...surface preparation reveals completely clean, bare paint, free of bonded and embedded contaminants. Employing both a chemical and mechanical process will deliver optimal performance of all BOSS Best Of Show System® creams.

CHEMICAL PREP



Iron & Fallout Remover



Foaming Surface Prep

MECHANICAL PREP




Fine Surface Prep Mitt or Surface Prep Pad

PAD & CREAM PAIRING


The color bar on the lower portion of BOSS cream bottles helps you select the proper baseline pad. But the Best Of Show System® can be adapted to address virtually any paint condition by pad flexing or interchanging pads to reduce or amplify a given cream's correcting or finishing ability.

FAST CORRECTING

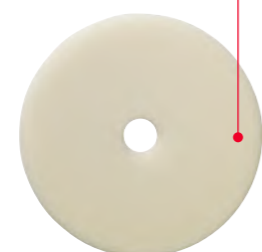


BOSS Fast Correcting Foam Pad

CORRECTING

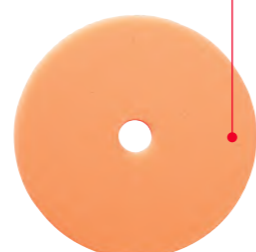


BOSS Correcting Foam Pad

PERFECTING

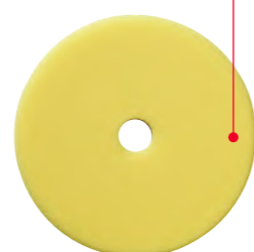

BOSS Perfecting Foam Pad

PROTECTING

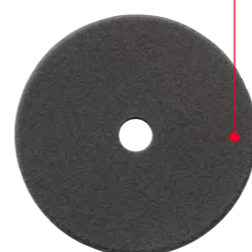

BOSS Finishing Foam Pad

MOST AGGRESSIVE

LEAST AGGRESSIVE

MICROFIBER PADS

These pads amplify the effectiveness of BOSS correcting creams for the rapid removal of moderate to severe defects.



BOSS Microfiber Fast Cutting Pad



BOSS Microfiber Pad



Pad Conditioning Brush



Microfiber & Foam Pad Cleaner

MORE AGGRESSIVE

AGGRESSIVE

PAD MAINTENANCE PRODUCTS

USAGE GUIDE

- 1 / Evaluate paint condition:** Identify number and severity of above and sub-surface defects.
- 2 / Select your process:** One-step (All-in-One) for mild defects or multi-step for moderate to severe defects.
- 3 / Do no harm:** Always select the least invasive method to avoid damage to your paint.
- 4 / Surface preparation:** Remove bonded surface contaminants with Iron & Fallout Remover, Paint Cleaning Clay, a Fine Surface Prep Mitt, or a Surface Prep Pad.
- 5 / Tape off trim:** Protect plastic and vinyl trim from backing plate scuffs and white polish residue.
- 6 / Butter your pads:** Apply product from the center out and use the domed cap for even distribution. Reapply 3 or 4 small drops per buffing cycle.
- 7 / Work zone:** Focus on a 2' x 2' area, spread product evenly, and make 3 or 4 full passes.
- 8 / Proper technique:** Work in overlapping passes and use a slow arm speed with little downward pressure so the polisher does all the work.
- 9 / Validate your system:** Check your results. If defects persist, repeat or adjust your method.



PAD MANAGEMENT

Frequently clean pad face: Use a Pad Conditioning Brush and/or compressed air via a regulatory approved air nozzle to maintain optimal polishing action and pad weight.

Pad cycling: Maintain optimal pad performance by installing a fresh pad every 3 or 4 panels of correction.

Wash pads: Rinse pads thoroughly with hot water immediately following work, wring, then saturate with Microfiber & Foam Pad Cleaner and knead until foam appears. Allow to dwell, then rinse thoroughly, or machine wash. Air dry.

Have fun in your garage!®

TO LEARN MORE, SEARCH GRIOT'S GARAGE ON: YouTube